



Panasonic GU87 LCD Cover removal Replacement

How to remove the LCD cover

Written By: Van





TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Tri-wing Screwdriver](#) (1)
-

Step 1 — LCD Cover removal



- Remove the four rubber screw covers from encircled locations.
- Using a #0 tri wing screwdriver, remove the screws previously hidden below the rubber covers.
- If you have difficulties finding this screwdriver, it is commonly sold as a Nintendo Gameboy/Wii screwdriver.

Step 2

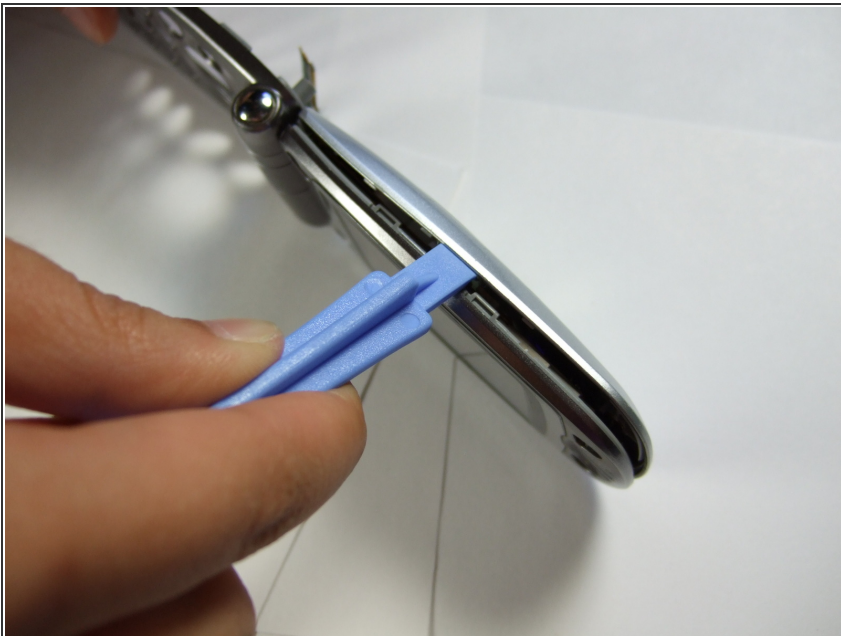

- Pry the case open using iPhone tool (as shown), fingernails, small flathead screwdriver, etc.
- Be mindful of location and magnitude of applied force, so as not to damage the case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-12 11:32:04 AM.